
 
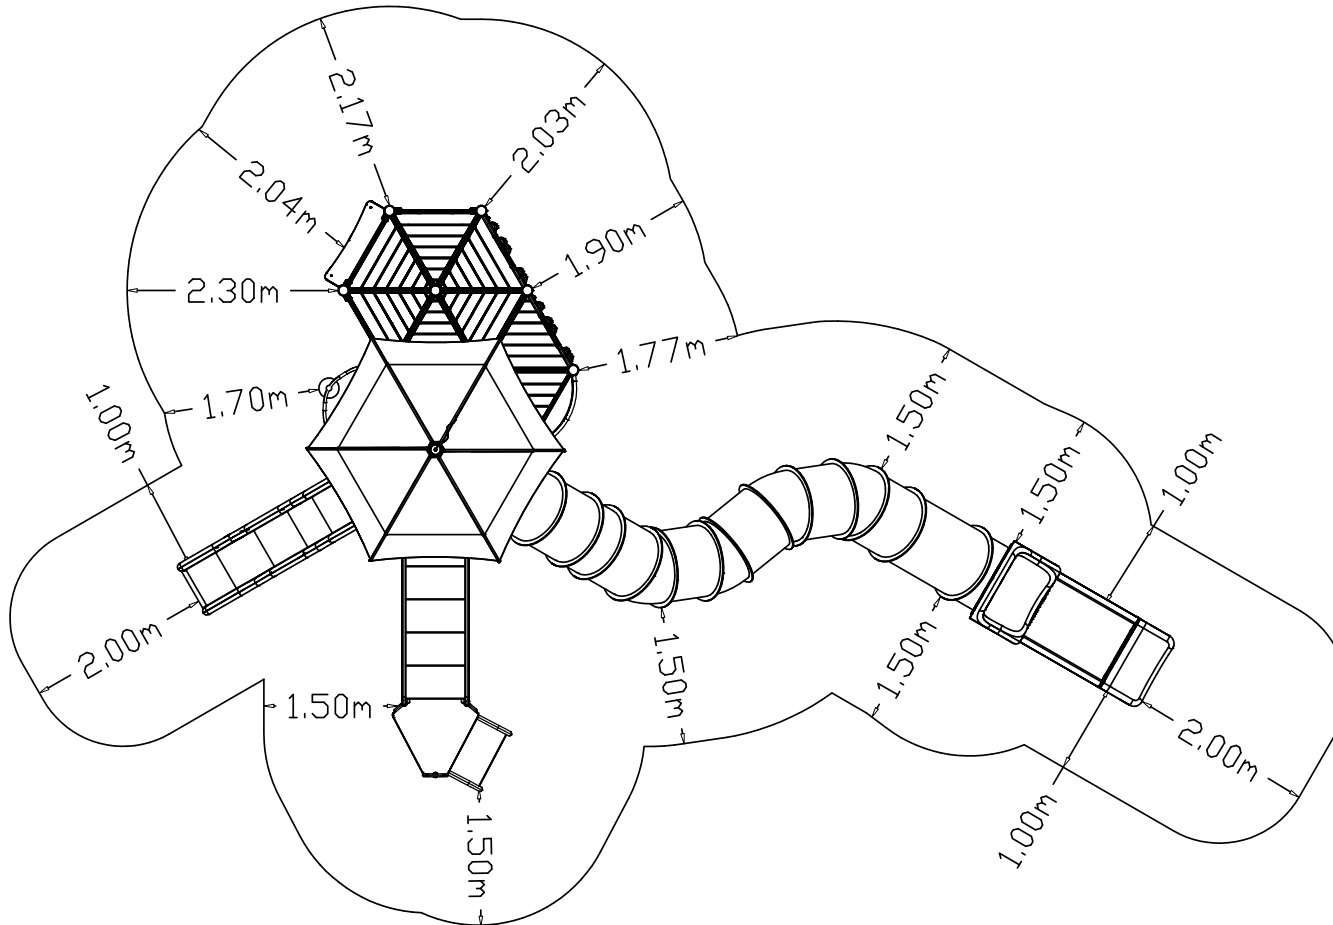 
 


S6



EN1176
2.90m


EN1176



S9

CSA Z 614
3.85m
[12'-8"]

 CSA Z614

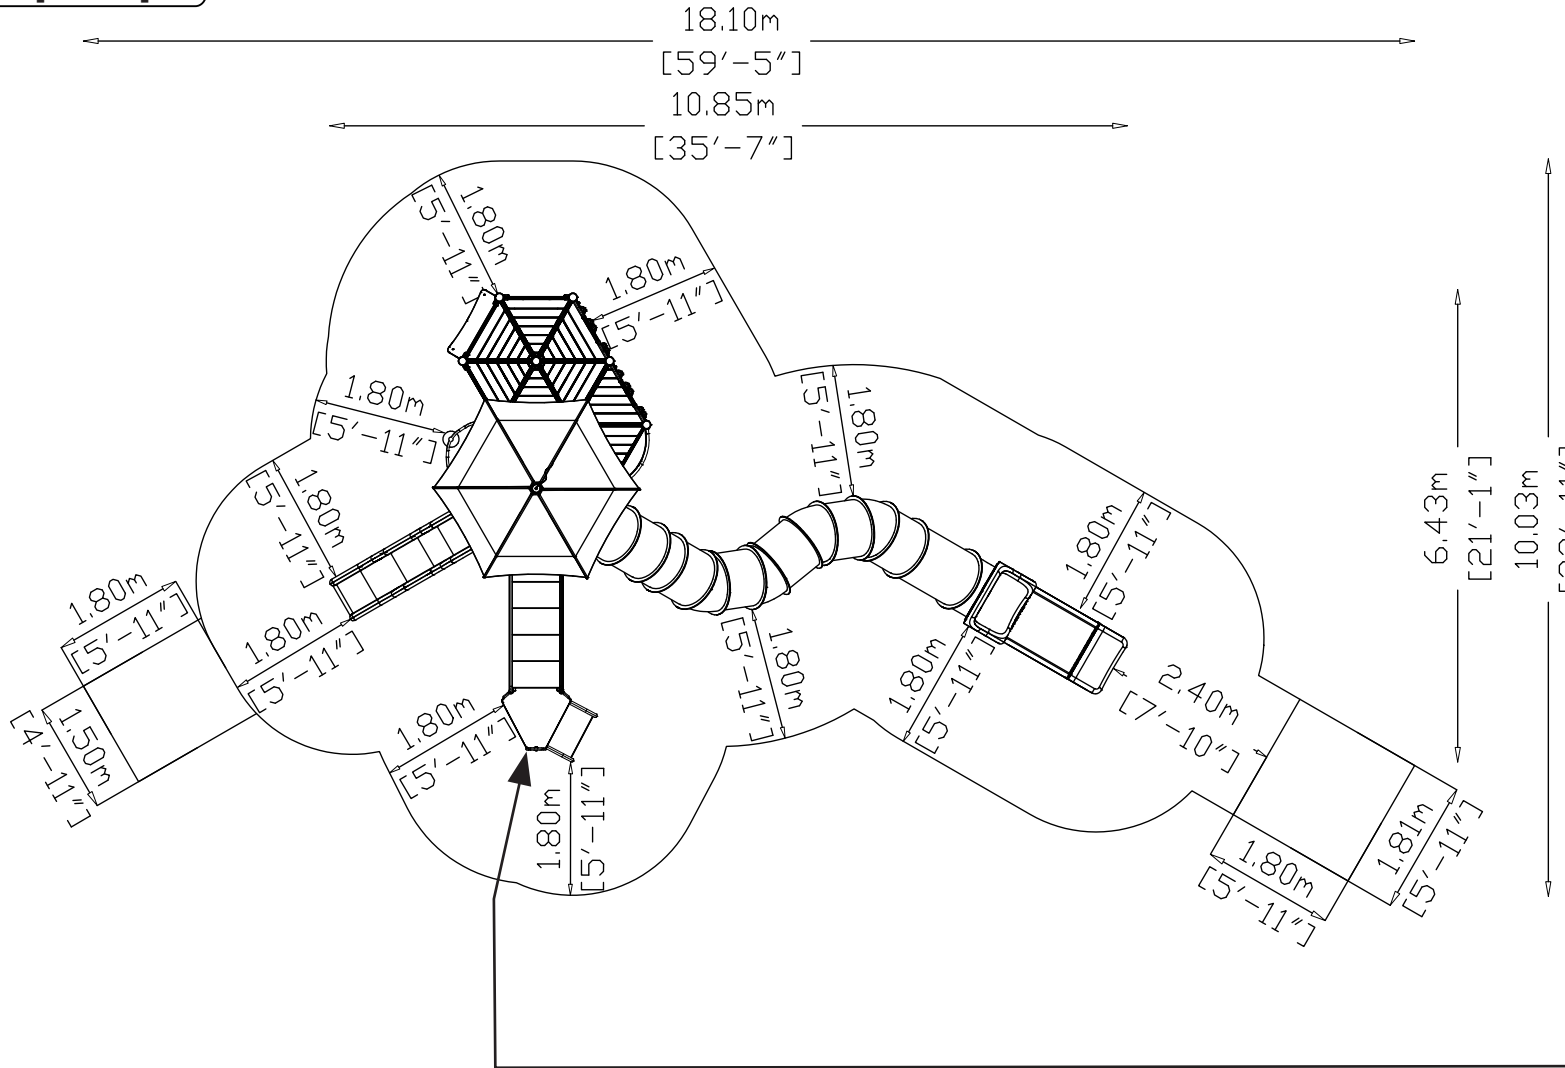

 INSTALL 101	WARNING Playground equipment used for first use should be inspected regularly and checked for any wear or damage before use. If any damage is found, the equipment should be repaired or replaced before use.	play smart! rules Do not play on broken or damaged equipment. Report it. Do not play without adequate safety clothing and footwear. No tobacco, alcohol or drugs should be used while playing. Do not play on or near playground equipment and its structure if it is damaged. Wash your hands. Do not eat, drink, or use equipment in any way. Do not play on or near playground equipment if it is damaged.
	WARNING Children are required to use the equipment in a safe and proper manner. Do not play on or near playground equipment if it is damaged.	Do not play on broken or damaged equipment. Report it. Do not play without adequate safety clothing and footwear. No tobacco, alcohol or drugs should be used while playing. Do not play on or near playground equipment and its structure if it is damaged. Wash your hands. Do not eat, drink, or use equipment in any way. Do not play on or near playground equipment if it is damaged.
	WARNING All playground equipment and rubber surfacing should be inspected regularly and checked for any wear or damage before use. If any damage is found, the equipment should be repaired or replaced before use.	Do not play on broken or damaged equipment. Report it. Do not play without adequate safety clothing and footwear. No tobacco, alcohol or drugs should be used while playing. Do not play on or near playground equipment and its structure if it is damaged. Wash your hands. Do not eat, drink, or use equipment in any way. Do not play on or near playground equipment if it is damaged.
	WARNING Paying attention to the safety of the equipment is the responsibility of the user. Do not play on or near playground equipment if it is damaged.	Do not play on broken or damaged equipment. Report it. Do not play without adequate safety clothing and footwear. No tobacco, alcohol or drugs should be used while playing. Do not play on or near playground equipment and its structure if it is damaged. Wash your hands. Do not eat, drink, or use equipment in any way. Do not play on or near playground equipment if it is damaged.

INSTALL 101

HAGS®

 
 
 
 
FOR KIDS AGES

 
 
 
 
5-12

YEARS

ADULT SUPERVISION RECOMMENDED

www.hags.com

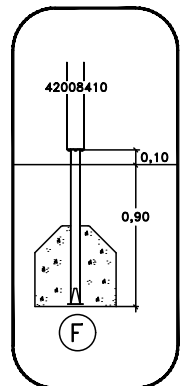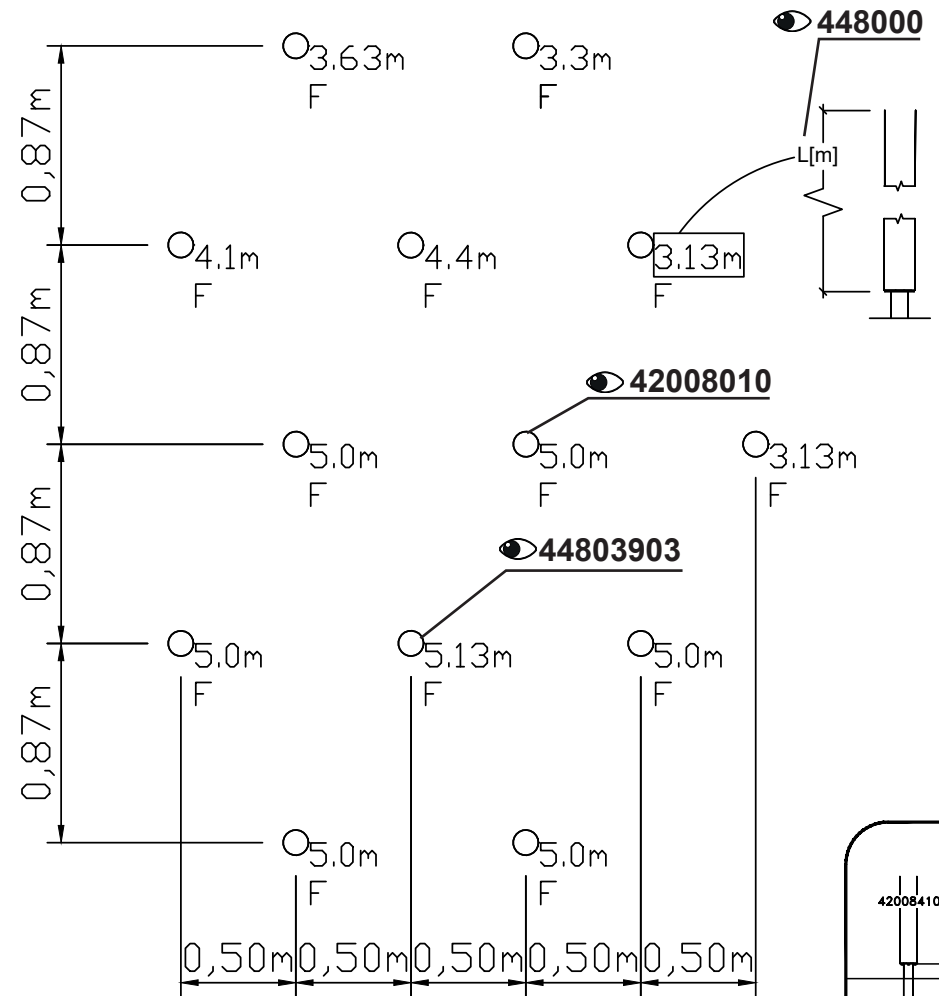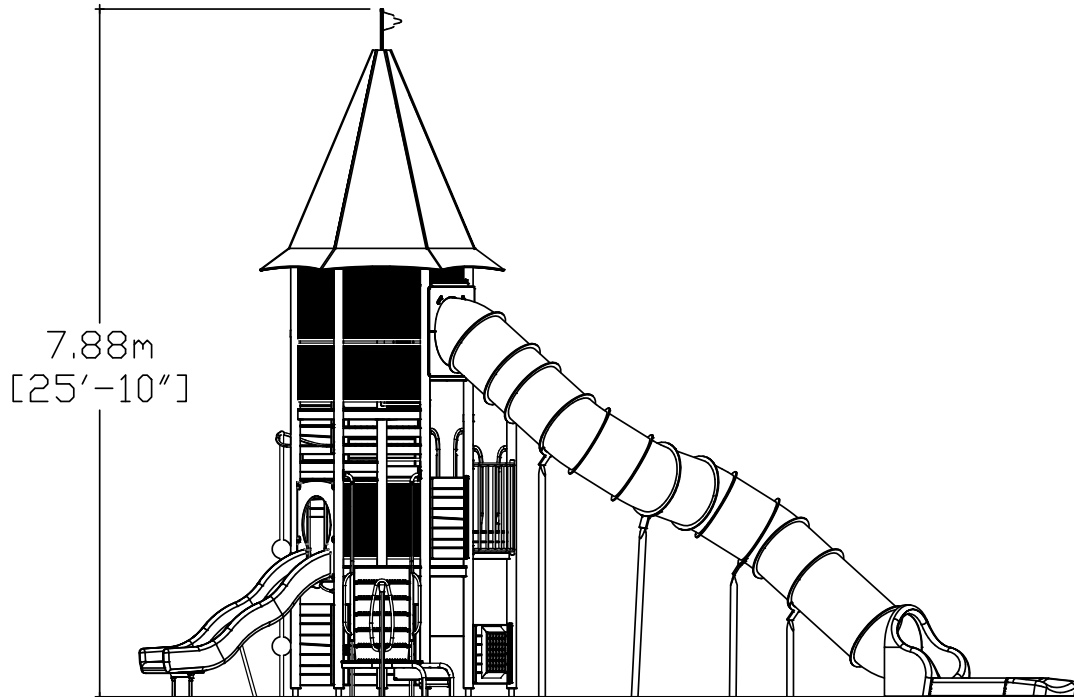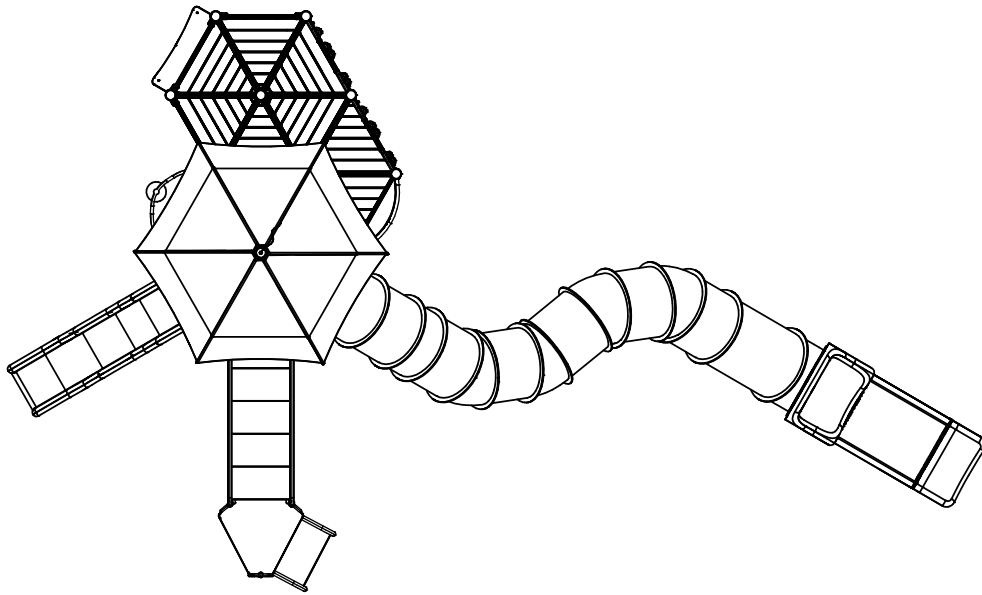


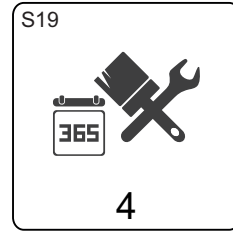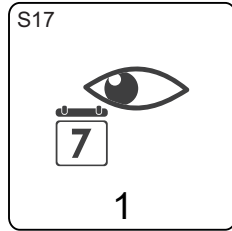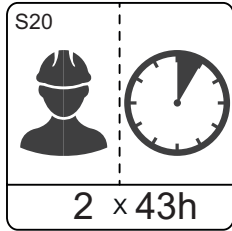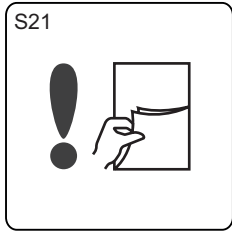


Install 101
260329
420200
420960
420995
426162
426200
448000
42008010
42060310
42060520
42275323
42475323
44803903
696305H
HAGS start 380 cm
MA422U77151
MA424U77151
MA62604
MASW103874
MASW34156
MASW35330
MASW41284
MASW42193

MASW46128
MASW65720
MASW85869
MASW89630




 
42008010



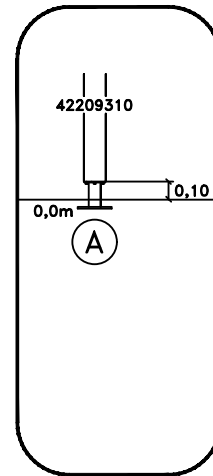




Above Ground
OM


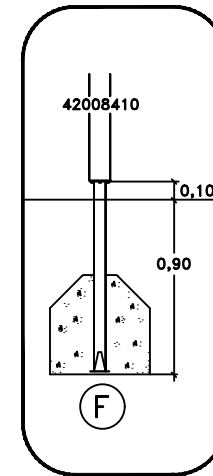 


Cast Loose Fill
BM
8102034

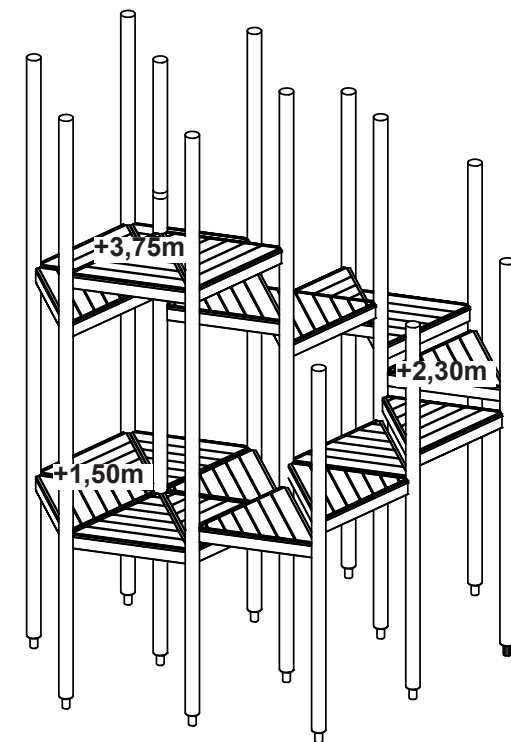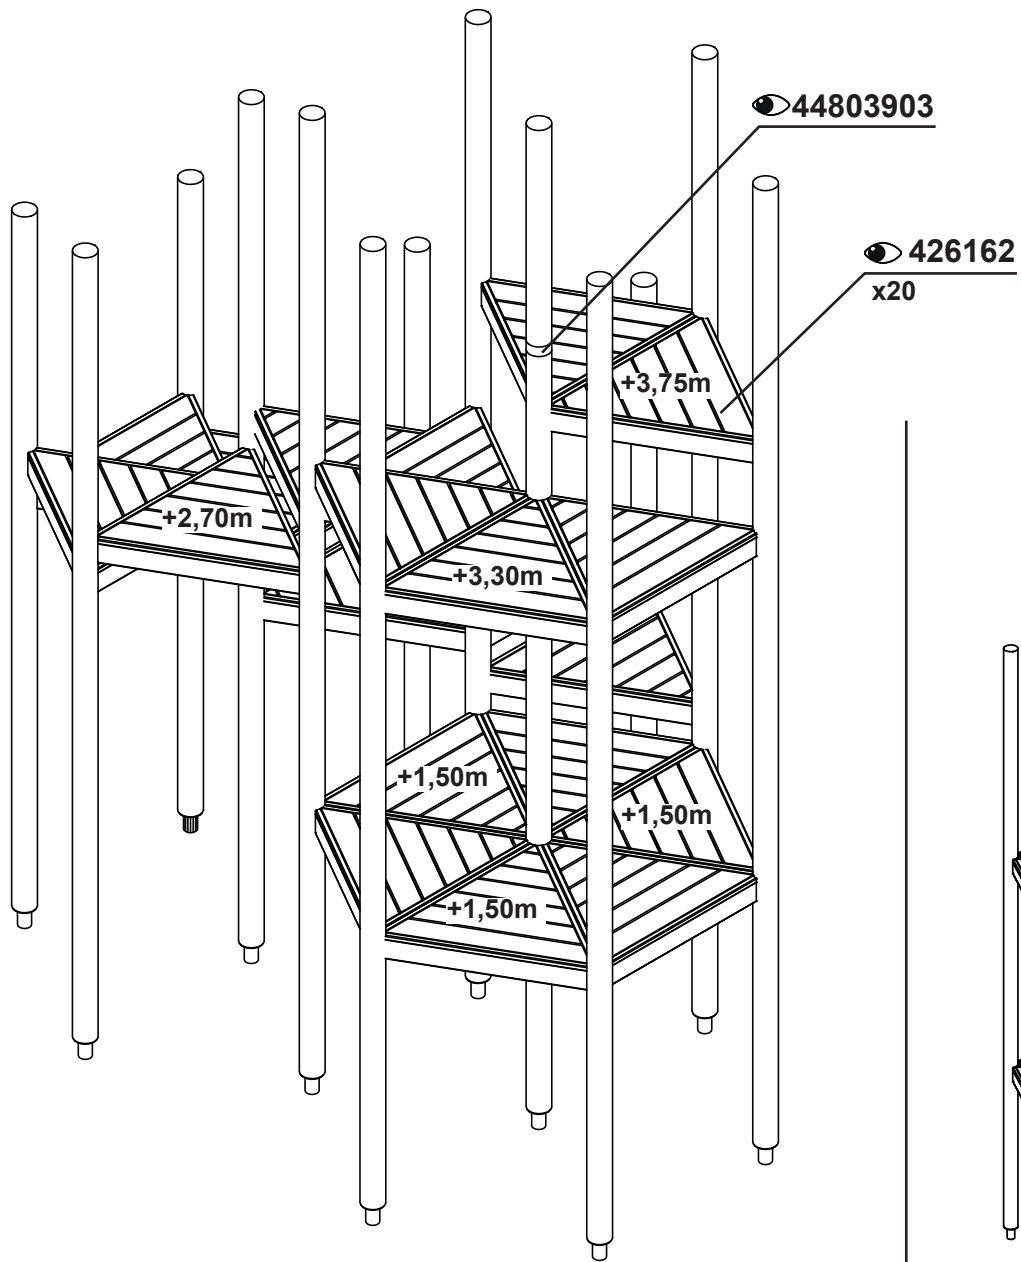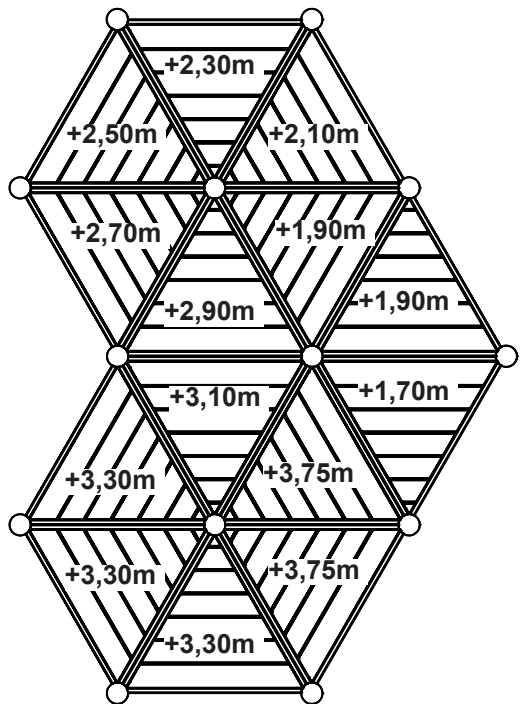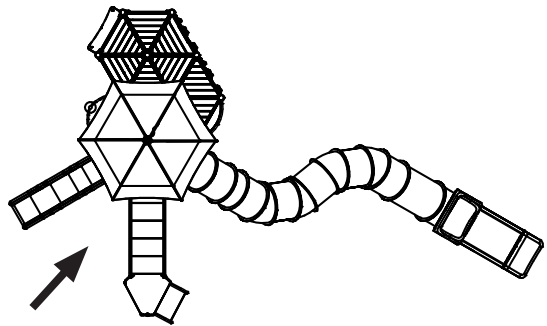    

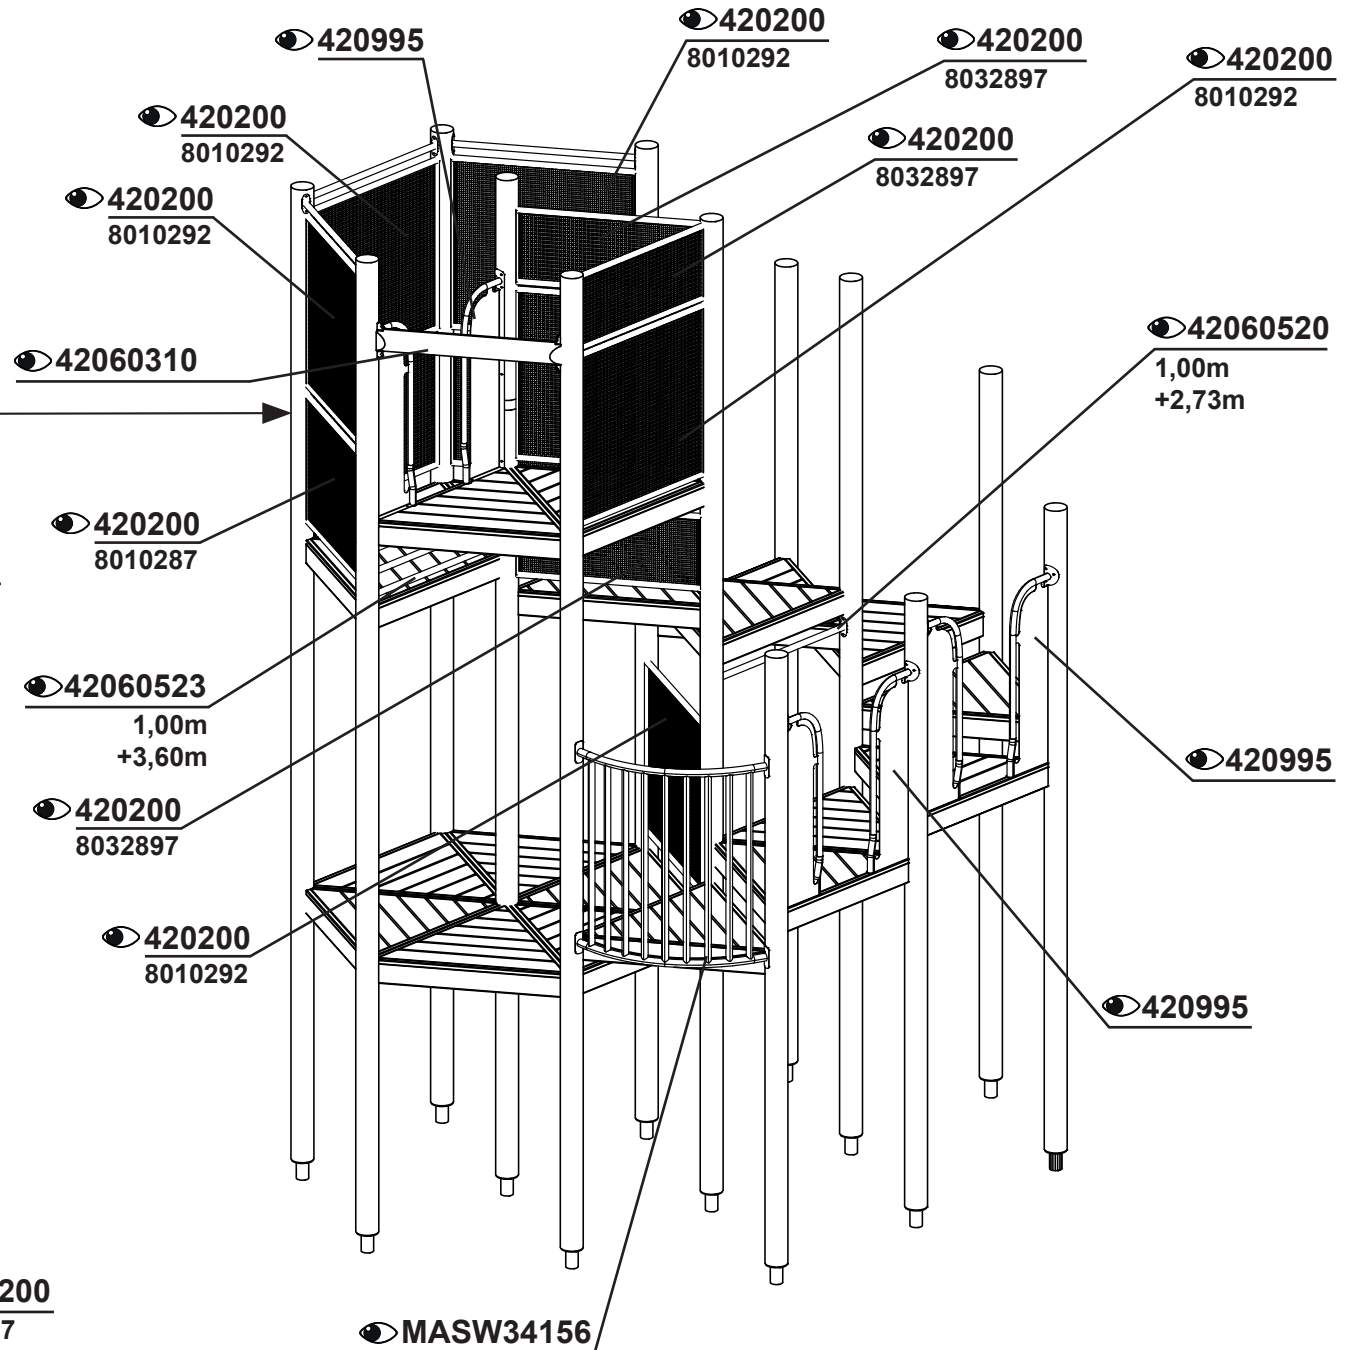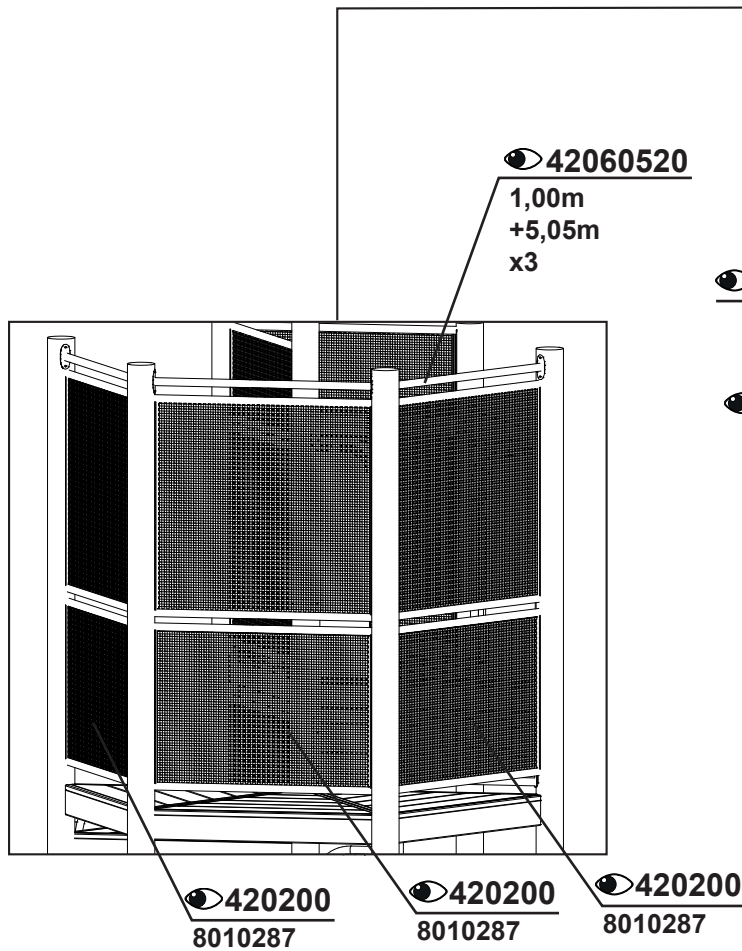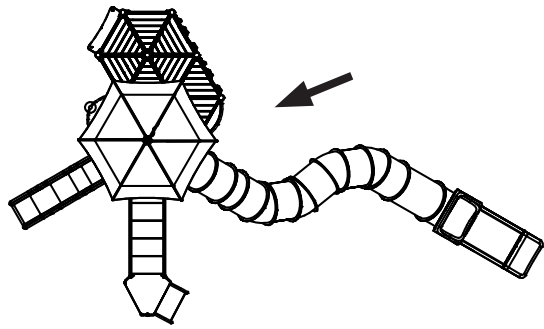   

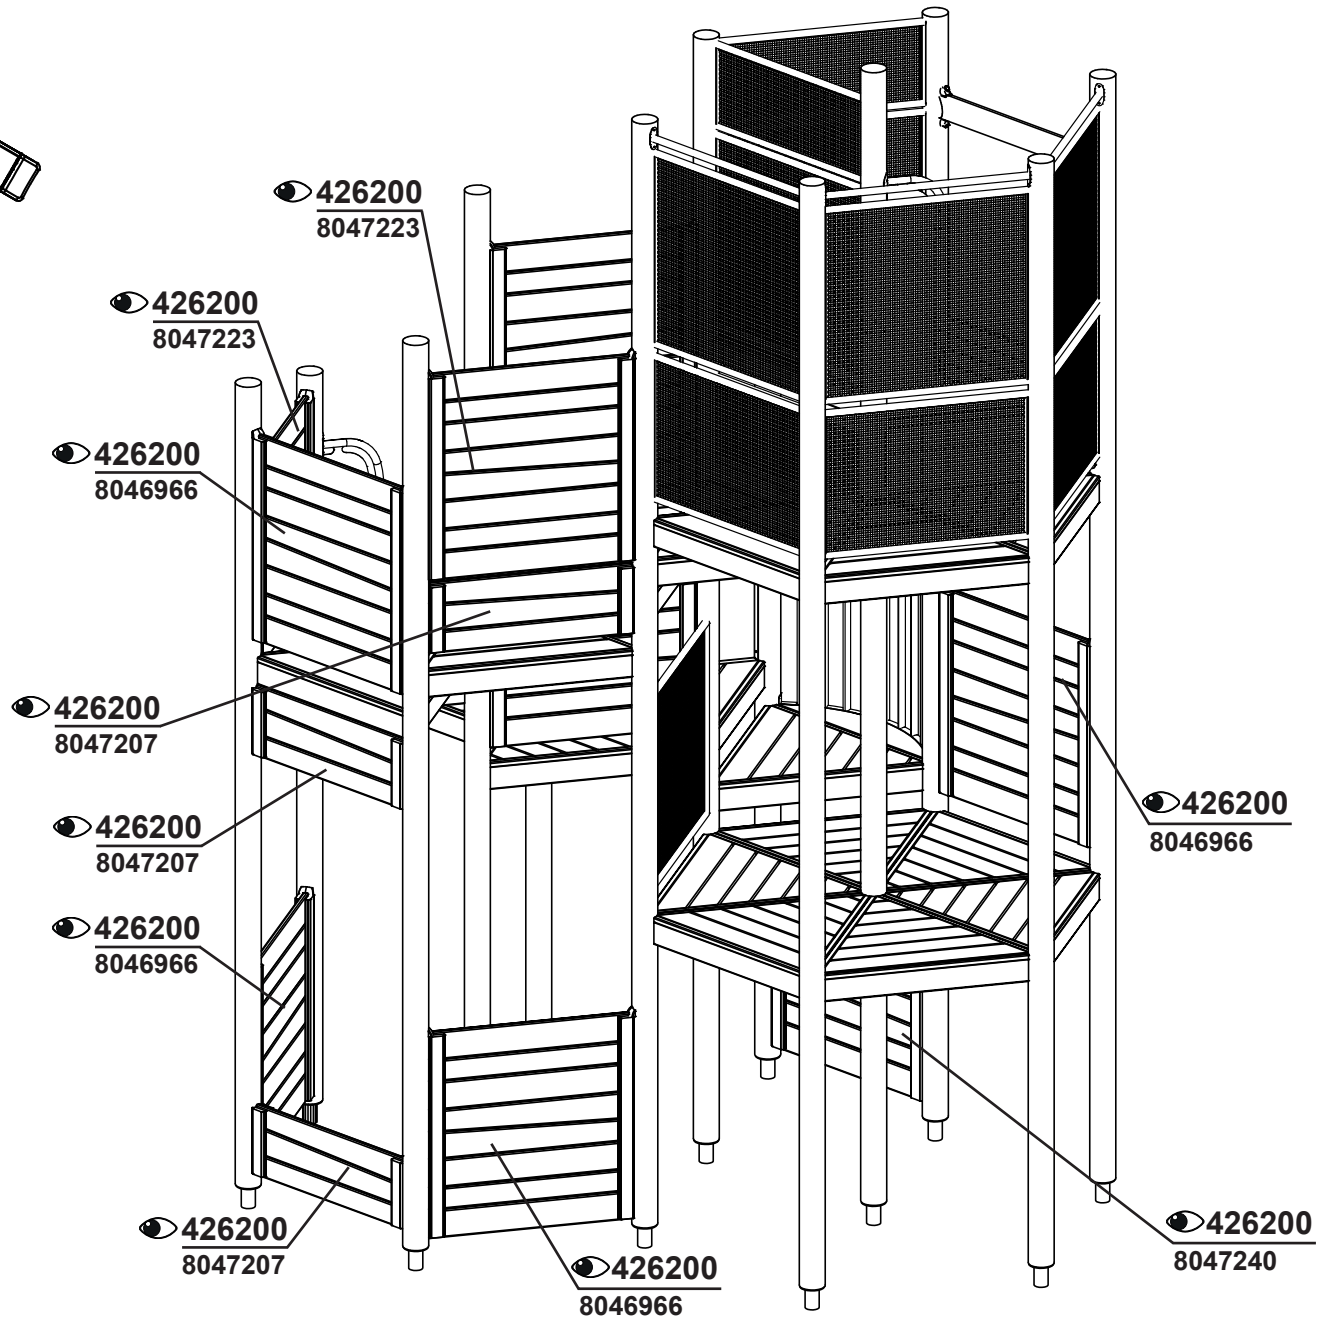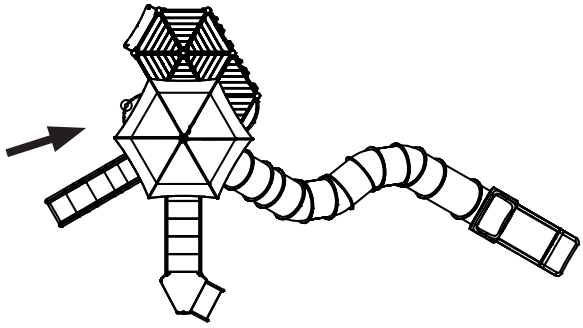  

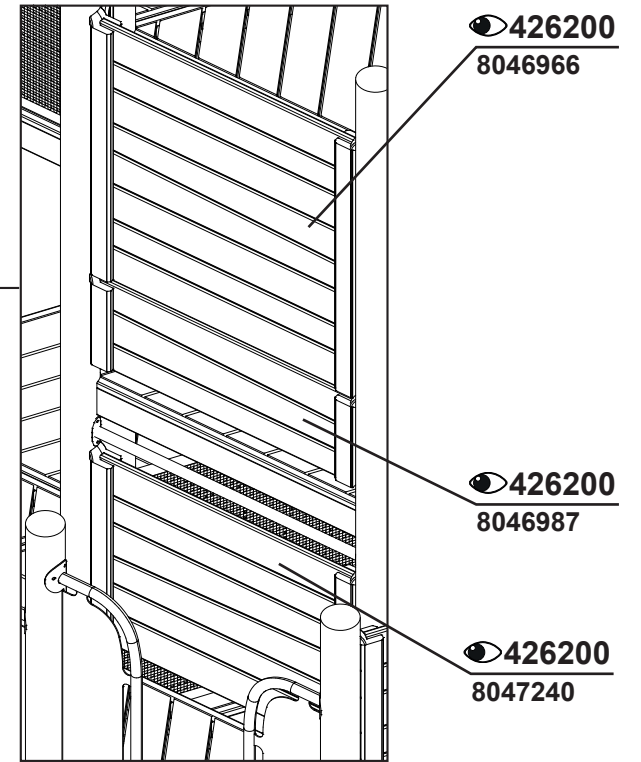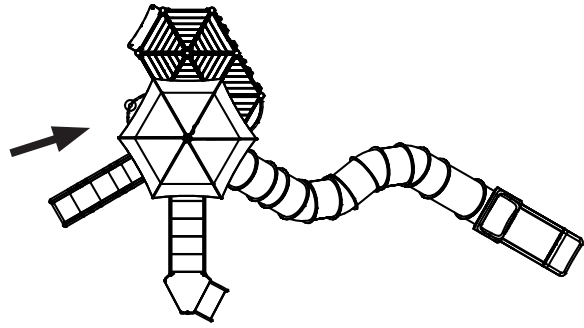  

426200

 
8046966

426200

8046987


426200

8047240

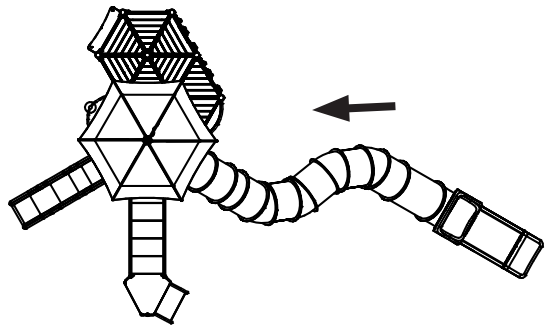

● 42475323 [BM]

 ● 42275323 [OM]

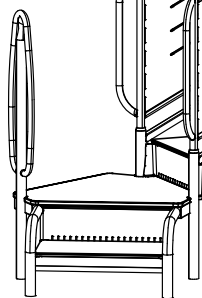




● MA424U77151 [BM]

● MA422U77151 [OM]

● MASW42193

 
 
 
● MASW42193

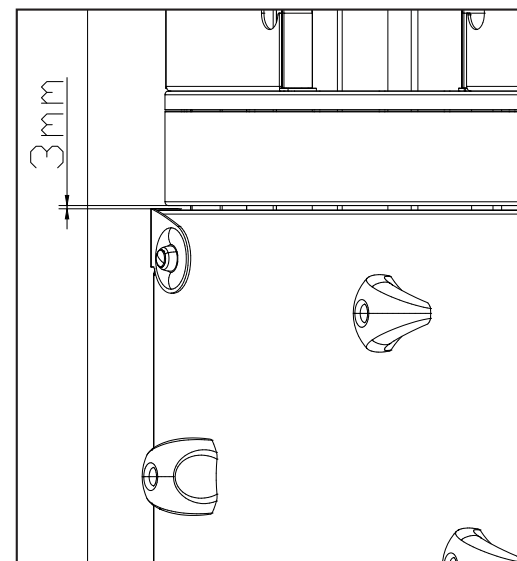

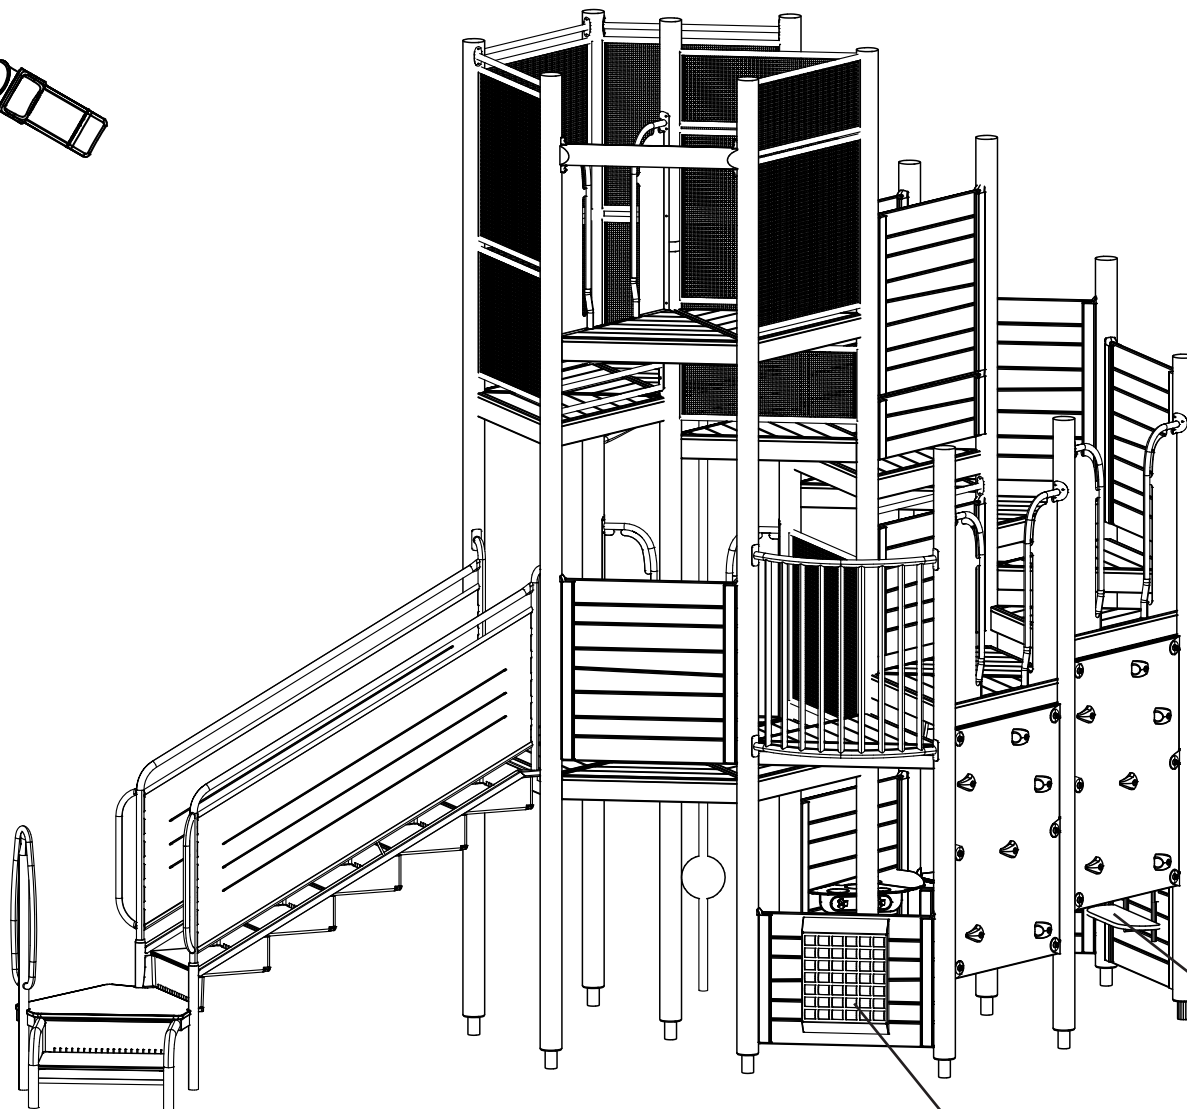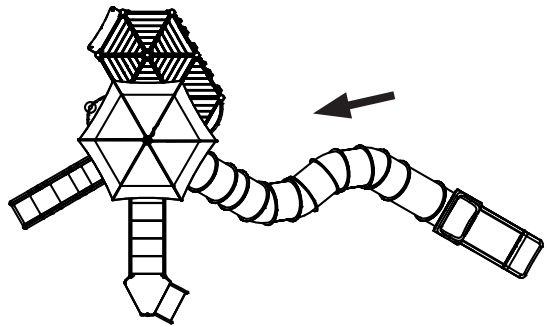


420960

   696305H

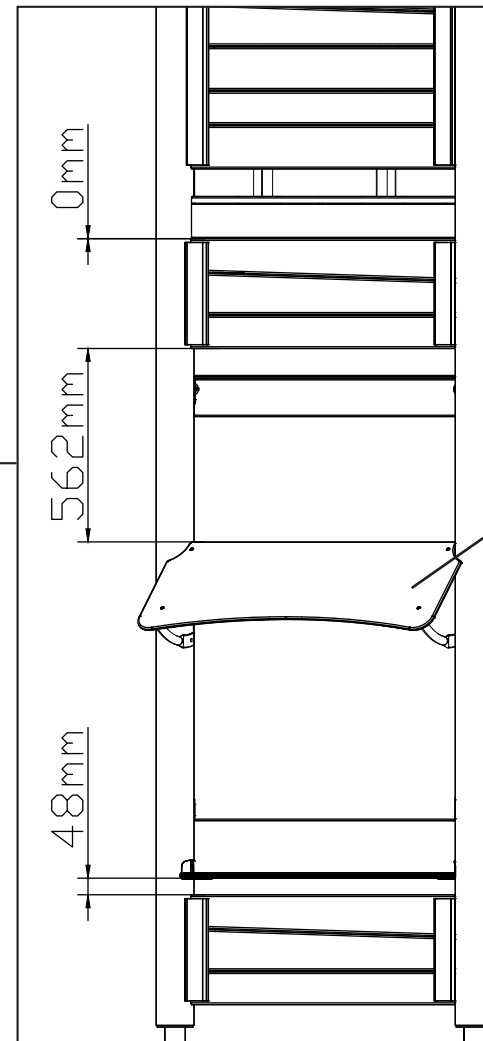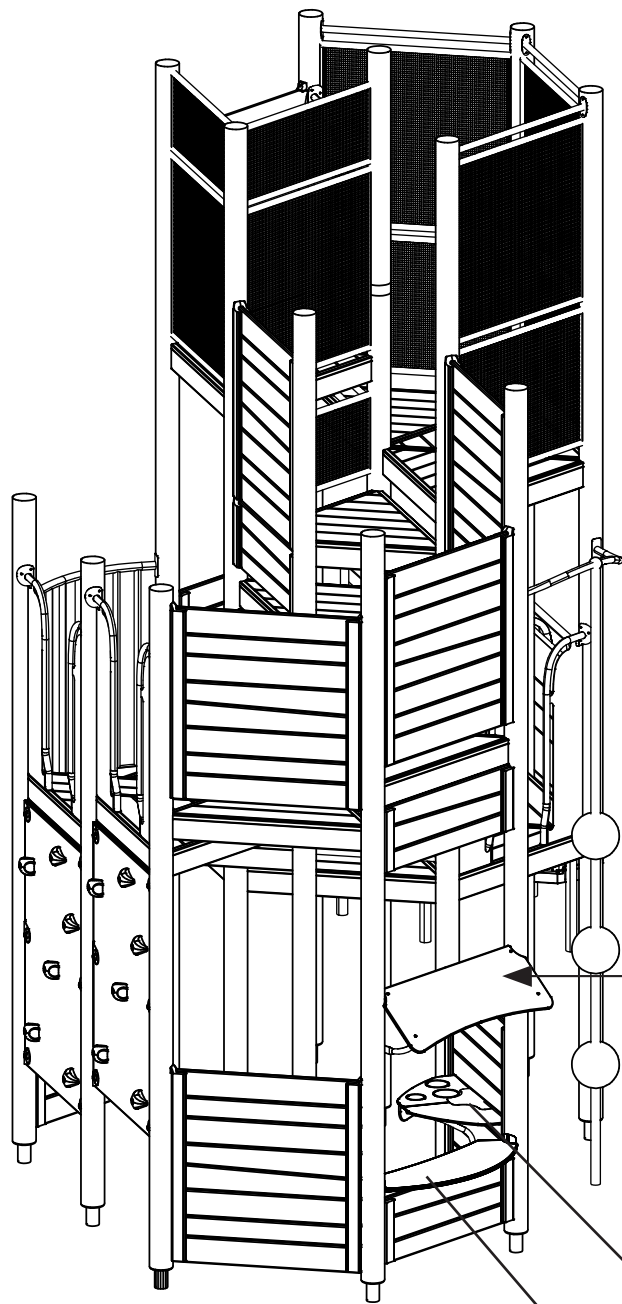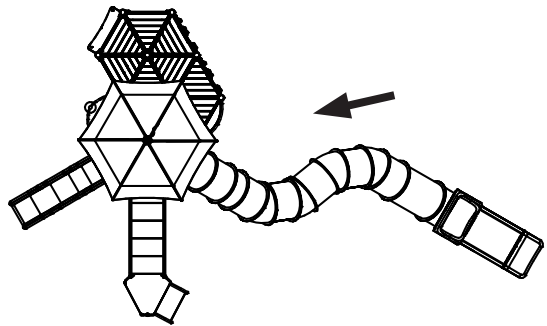

● **MASW46128**

 ● **MASW35330**

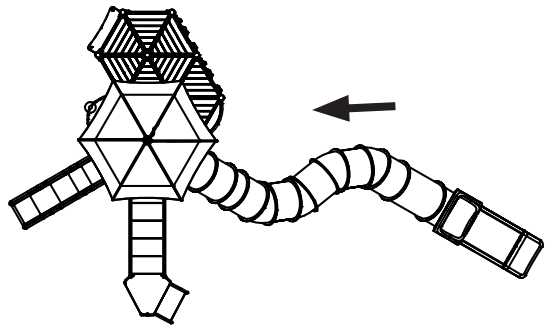

● MASW65720

● MASW89630

● MASW41284

x7

● HAGS start 380 cm

HAGS
 260329

● MASW103874 [BM]

● MASW85869 [OM]