


Installation of UrbanGym and Gym combi products with installation frame

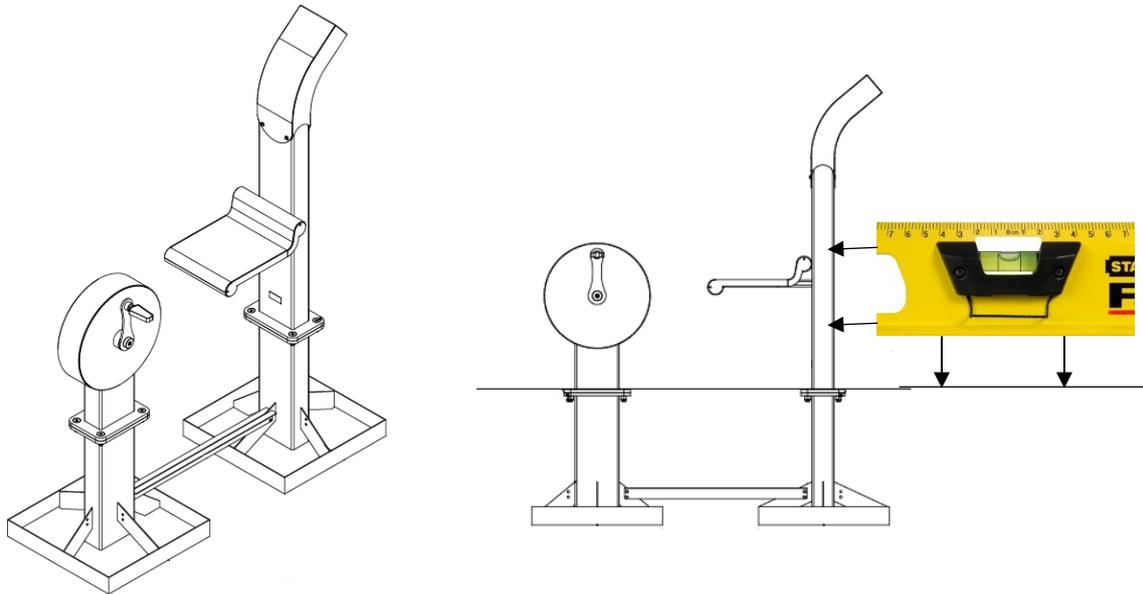

The installation frames are designed in such a way that no liquid concrete is necessary, just cover the frame with the soil. When the ground contains lots or only sand, then we advise to use liquid concrete.


NEVER remove the connecting strips between the installation frames.

Then check if the posts and other parts are completely level, and check if the product functions as it should.

Only then use a compacting machine to press the soil together (and finish the ground layer).

Make sure the installation frames are completely covered with soil, up to the foot plates.



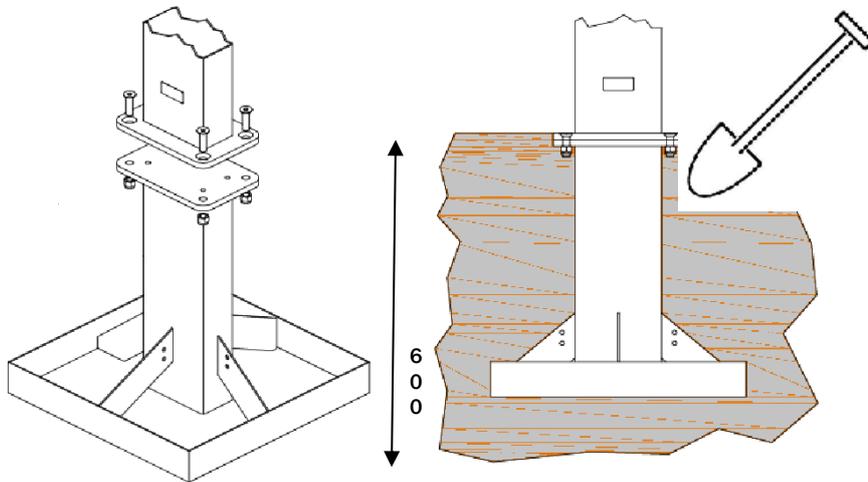

Correct installations:

