


## Installation of UrbanGym and Gym combi products directly on concrete\* (not tarmac)

Use provided wedge anchors M16 and M12:

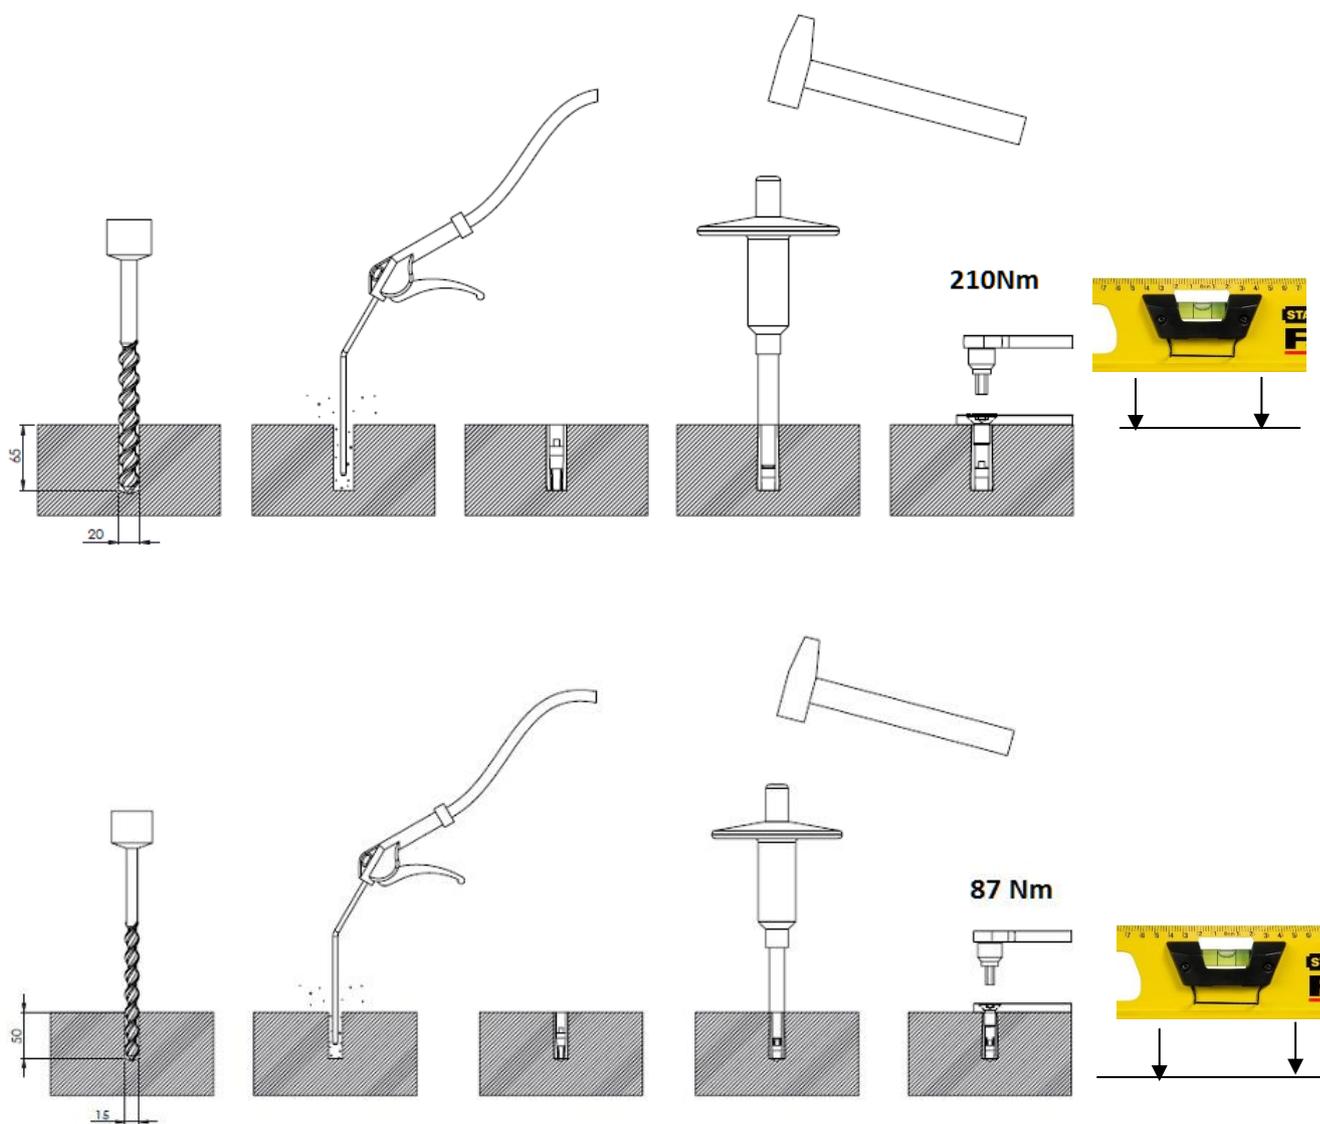

\* Installation on tarmac is NOT possible



- 1 – Put the device on a flat concrete floor and mark the holes.
- 2 – Drill the marked holes
- 3 – Clean the holes with air
- 4 – Apply the wedge anchors M16/M12 in the holes.
- 5 – Use the provided striking pin to secure the anchors in the holes
- 6 – Put the device with the holes above the anchors and fasten the bolts M16/M12 (provided by Denfit)



**BEFORE APPLYING WET POUR OR ARTIFICIAL GRASS MAKE SURE THAT THE COMPLETE UNIT IS LEVEL, STABLE AND CORRECTLY INSTALLED!  
AND CHECK IF THE PRODUCT FUNCTIONS AS IT SHOULD.**